



Keypad Installation Guide

Notes

- The default password is 0000
- When programming, try not wait more than 5 seconds after each input, or the programming exits automatically
- A Calimet remote control is required
- If you hear 2 short beeps, the wrong password was entered

Step 1 – Connecting the battery

- Use the included key to open the inside of the keypad
- Remove the plastic cover from the battery
- Attach the black and red cable to the battery
- Press the black reset button on the circuit board until the ring stops (about 2 seconds)

STEP 2 - Setting a New Password

- The default password is 0000
- Now let's change that to something else
- Press and hold the # key until you hear a long beep (about 5 seconds)
- Enter 0000 and then press the * key
- Enter your new password (any 4-6 numbers) and press * when done, Example: 1234 or 123456
- We are now finished setting up the password

STEP 3 - Connecting the Keypad to the Gate Opener

- Have your Calimet remote control ready, you will need it in a few steps ahead
- Press and hold the # key until you hear a long beep (about 5 seconds)
- Enter your new password followed by the * key
- Press the # key once
- Press your remote control and hold it down for about 2 seconds (you will hear a beep)
- Finished, the keypad is now connected to the gate opener
- To open and close the gate, enter your password, followed by the * key

STEP 4 - Mounting the Keypad

- Mount the keypad on a pedestal or post on the side of the gate
- You can also place the keypad directly on the gate, or also on a nearby wall, or any other location within 50 feet of the gate operator

(OPTIONAL) - Resetting the Password if you Forgot it

- Open your keypad with the included key
- On the inside, press and hold the black reset button for 2 seconds
- The password has been reset and is now 0000. Return to step 1 to set a new password

(OPTIONAL) - Keypad Installation Video:

<https://youtu.be/cUTNtu7TpBM>