

Connect your remote control to your gate opener

A. Open the gate opener cover and lift the panel to find the circuit board.


B. On the circuit board, look for the black “STUDY” button, generally located in the middle left side (for some circuit boards it may be located on the top right side).

C. Press and hold the button on the remote control.

D. Press and hold the STUDY button on the circuit board until the flashing light becomes solid, about 1.5-2 seconds. Then stop holding both the remote control and study button.

G. You are now finished. The remote is now connected to the gate opener.

If that didn't work, it's because the STUDY key was held down for too long. 1.5 to 2 seconds is enough.

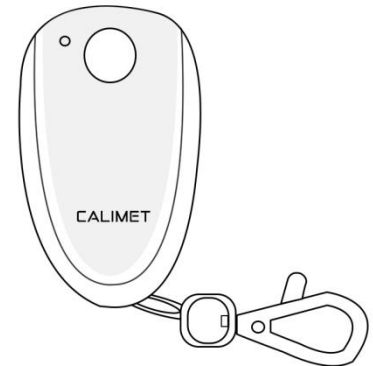

Removing Existing Remotes

Press the STUDY key and hold for 8 seconds, watch the light state: flashing-solid-flashing, the removal is done. All existing remote controls have been removed.

Battery Replacement

Use a 27A 12V battery to replace the existing battery if depleted.

Video Instructions

https://youtu.be/nXWRCZ6t_IY