
Connect your remote control to your gate opener

- A. Open the gate opener cover, and lift the panel to find the circuit board.
- B. On the circuit board, look for the black “STUDY” button, generally located in the middle left side (for some circuit boards it may be located on the top right side).
- C. Press and hold any of the two buttons on the remote control.
- D. Press and hold the STUDY button on the circuit board until the flashing light becomes solid, which takes about 2 seconds. Then stop holding both the remote control and study button.
- G. You are now finished. The remote is now connected to the gate opener.
- E. (Optional Step) The second button on the remote control can be used on a different gate/gate opener. Repeat step A if you wish to use the second button on the remote control.

If the remote did not connect, it's because the STUDY key was held down for too long. 1.5 to 2 seconds is enough.

Removing Existing Remotes

Press the STUDY key and hold for 8 seconds, watch the light state: flashing-solid-flashing, the removal is done. All existing remote controls have been removed.

Video Instructions

https://youtu.be/nXWRCZ6t_IY