


#### Notes

- The default password is 0000
- When programming, try not wait more than 5 seconds after each input, or the programming exits automatically
- A Calimet remote control is required
- If you hear 2 short beeps, the wrong password was entered

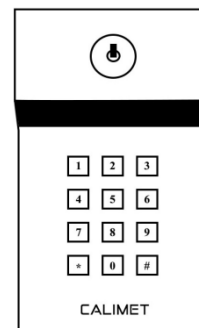

#### Step 1 – Connecting the battery

- Use the included key to open the inside of the keypad
- Remove the plastic cover from the battery
- Attach the black and red cable to the battery
- Press the black reset button on the circuit board until the ring stops (about 2 seconds)

#### STEP 2 - Setting a New Password

- Note: The default password is 0000
- Press and hold the # key until you hear a long beep (about 5 seconds)
- Enter 0000 and then press the \* key
- Enter your new password (any 4-6 numbers) and press \* when done, Example: 1234 or 123456
- We are now finished setting up the password

#### STEP 3 - Connecting the Keypad to the Gate Opener

- Have your Calimet remote control ready, you will need it in a few steps ahead
- Press and hold the # key until you hear a long beep (about 5 seconds)
- Enter your new password followed by the \* key
- Press the # key once
- Press your remote control and hold it down for about 2 seconds (you will hear a beep)
- Finished, the keypad is now connected to the gate opener
- To open and close the gate, enter your password, followed by the \* key

NOTE: If step 3 does not work, and the keypad is not connected to the gate opener after several attempts, see Step 3.1 on page 3.

#### STEP 4 - Mounting the Keypad

- Mount the keypad on a goose-neck pedestal (not included) or post on the side of the gate
- You can also place the keypad directly on the post of a gate, or also on a nearby wall, or any other location within 50 feet of the gate operator.
- Installation Finished.

#### Resetting the Password

- Open your keypad with the included key
- On the inside, press and hold the black reset button for 2 seconds
- The password has been reset and is now 0000. Return to step 1 to set a new password


#### Adding More than One Keypad

More than one keypad can be installed on the gate opener, follow the same steps above to install more than one keypad.

### Hardwiring the keypad directly to the gate opener

Several commercial properties may require a keypad that uses a direct electrical source instead of a battery. You may wire the keypad directly onto the gate opener, and the keypad will use electricity from the gate opener.

- Inside the keypad, take the red and black wire, and join (splice) it to another electrical wire (purchased separately) of the same color and size
- Open your gate opener hood
- Inside the hood, look for a green outlet that contains three inputs.
- Use a flathead screwdriver to release the top of the two outlets on the right
- Insert the red wire into 24-VDC and the black wire into 24V-COM
  - (OPTIONAL) For other brand gate operators, red wire is 12-24V DC and black is Common
- Use a flathead screwdriver to close the outlet

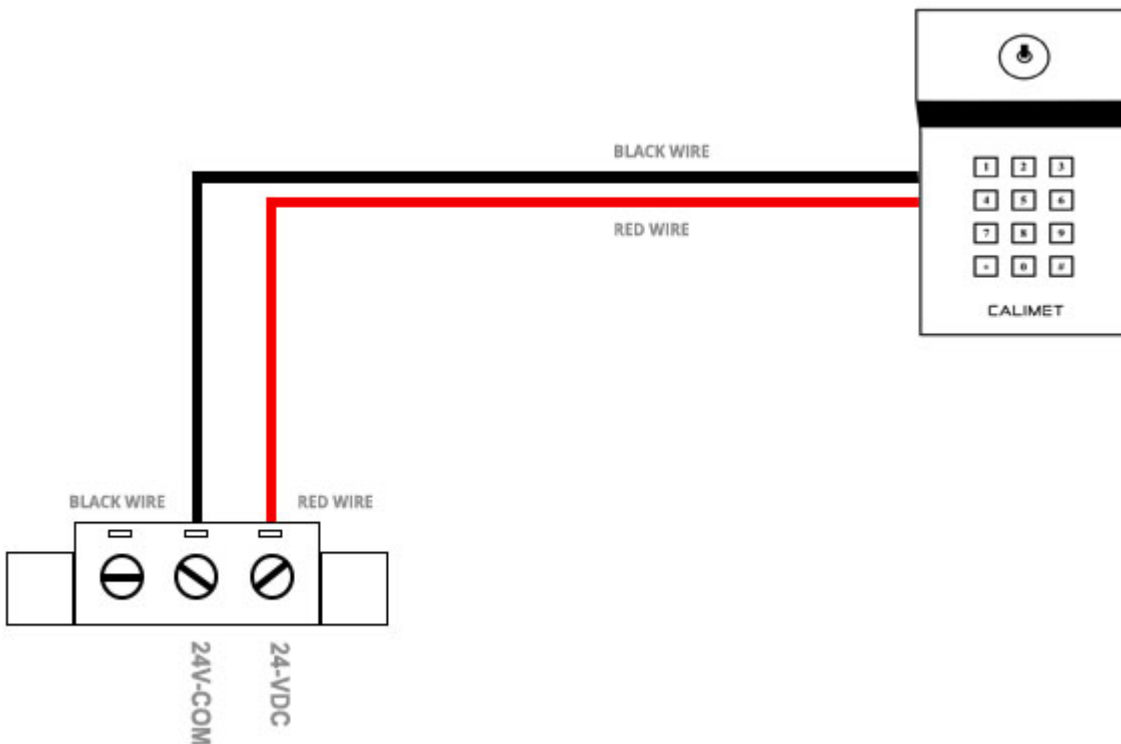

- Hardwiring Multiple Keypads – If hardwiring multiple keypads, put all wires from different keypads into the same green outlet. Example: if you are hardwiring two keypads, both red wires would go into the same right-most outlet, and both black wires would go into the same middle outlet.

### Battery Replacement

- The alarm with 3 repeating beeps indicates the battery is low and needs to be replaced
- Replace with any standard 9V battery

### Keypad Installation Video:

<https://youtu.be/cUTNtu7TpBM>

### **Step 3.1 Connecting the Keypad to the Gate Opener (Alternate method)**

This is only necessary if Step 3 did not connect the keypad to the gate opener. Different generations of keypads have different connection procedures. Follow the steps below to connect the keypad to the gate opener.

- Open the black cover of your gate opener
- On the gate opener circuit board, press and hold the study button until the flashing light becomes solid (about 2 seconds)
- Enter your password followed by the \* key
- Enter your password again, followed by the \* key
- Finished, the keypad is now connected to the gate opener
- To open and close the gate, enter your password, followed by the \* key